

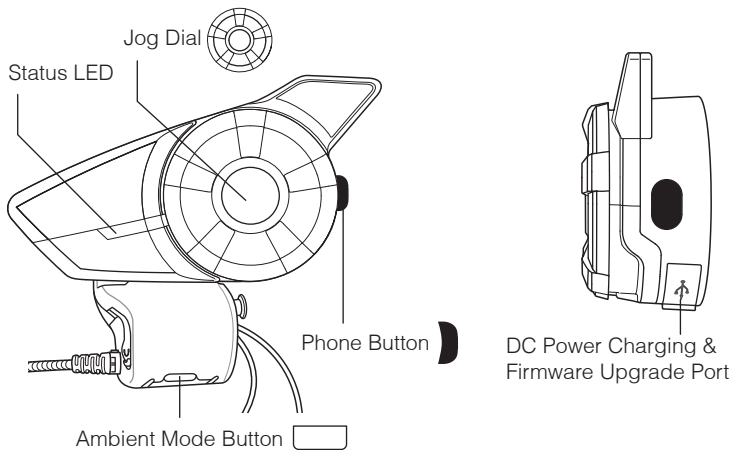





20S EVO Quick Start Guide

ENGLISH

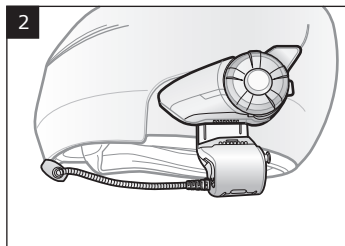


Installation

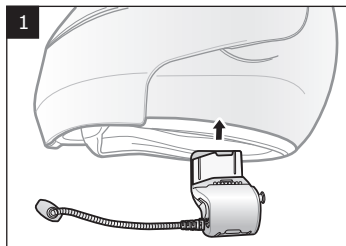

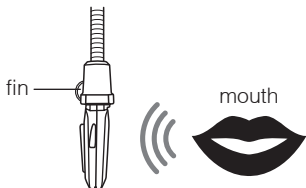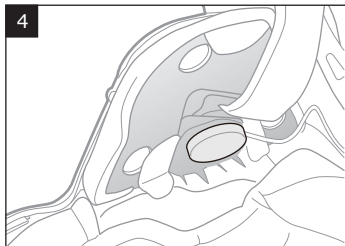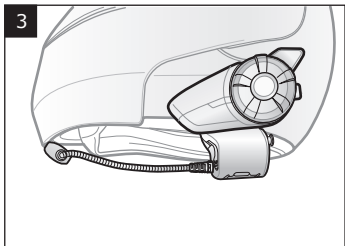


Microphone Direction


Button Operation

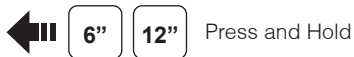


Power On/Off

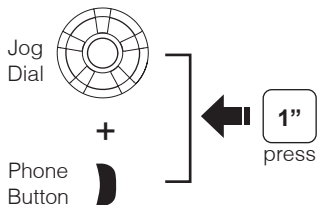

Volume Adjustment

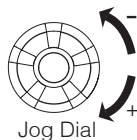

Ambient Mode

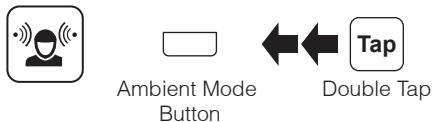


Bluetooth Pairing Phone, MP3 and GPS



Status LED

Select **Sena 20S**

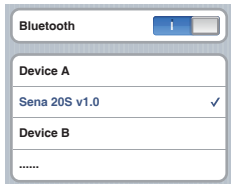

Enter PIN

Mobile Phone



Answer



Phone Button



Tap



End



Phone Button



Tap



Voice Dial



Phone Button



Tap



Speed Dial



Phone Button



Tap

Double Tap



Reject



Jog Dial



2"

press



Call Transfer




Phone Button




2"

press

Music

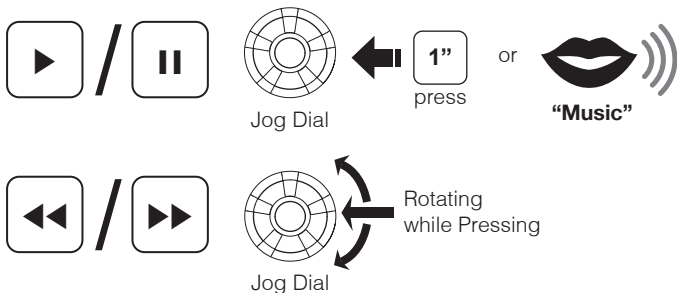

Battery Check

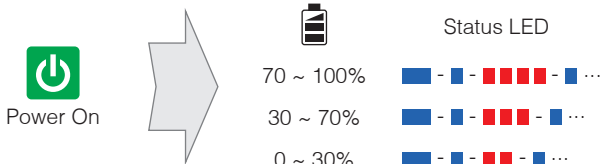


Configuration Menu




There is **Universal Intercom Pairing** in the Configuration Menu.


Normal Pairing Intercom

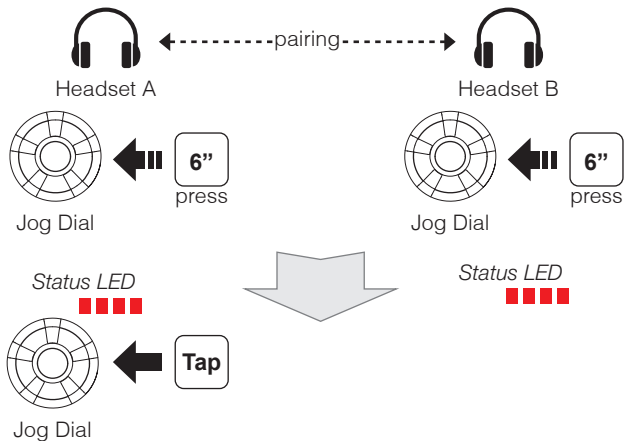


Start / End Intercom

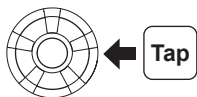

1st Friend

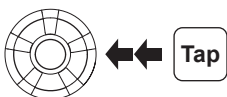


2nd Friend

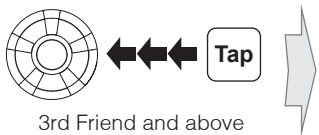


3rd Friend and above

3rd ~ 9th
Friend, Cancel

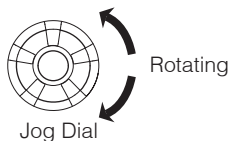

Jog Dial

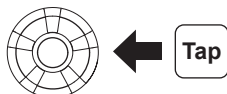

Jog Dial

Start / End Group Intercom



Ambient Mode
Button



press

Radio On / Off



Radio Seek Stations




Radio Scan Up FM Band




Save to preset while scanning




Radio Save or Delete Preset

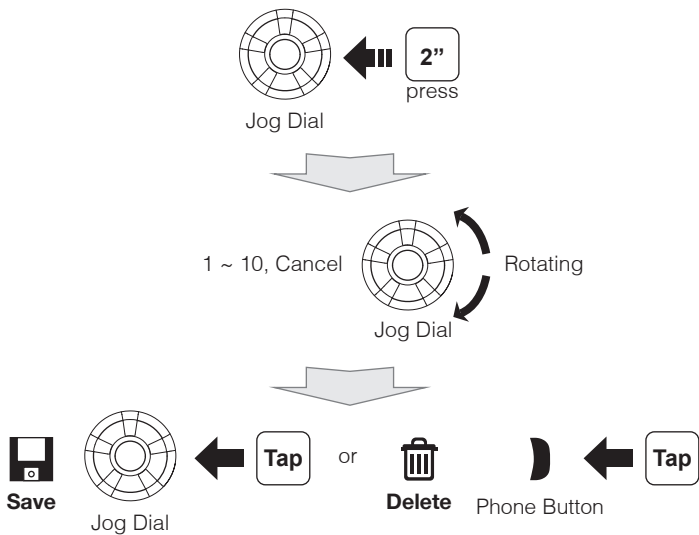

Radio Move to Preset Station

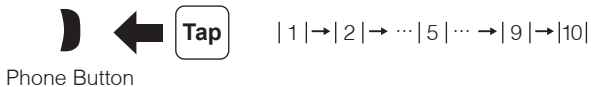

Voice Command

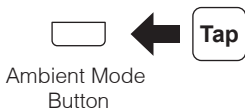

or



Voice Command	Function
“Music”	Music play/pause
“FM radio”	FM Radio on/off
“Intercom [one, two, ... , nine]”	Start/End each intercom
“Speed dial [one, two, three]”	Speed dialing

A full version of the manual is downloadable at
www.sena.com.

SENA



Sena Technologies, Inc.

Customer Support: sena.com